

STUCCO FINISH COAT
SCRATCH AND BROWN
COAT ON WIRE LATH

15 FELT DOUBLE
IF OVER PLYWOOD

2" X STUDS @ 16" OC

**ALL HOLD DOWN BOLTS
MUST BE SET IN PLACE
BEFORE REQUESTION A
FOOTING INSPECTION**

5/8" X 10 ANCHOR BOLTS
ALL BOLTS MUST BE IN PLACE
FOR FOOTING INSPECTION
W/ 2" X 2" X 3/16" SQUARE WASHERS
6' ON CENTER 12" FROM SPLICES MINMUM


WEEP SCREED

SLOPE TO DRAIN
2% MIN AWAY FROM BUILDING
5' MIN

(2) #4 RE BAR CONTIN.

**ALL STEEL TO BE 3"
MIN CLEAR FROM EARTH**

12-06-2000

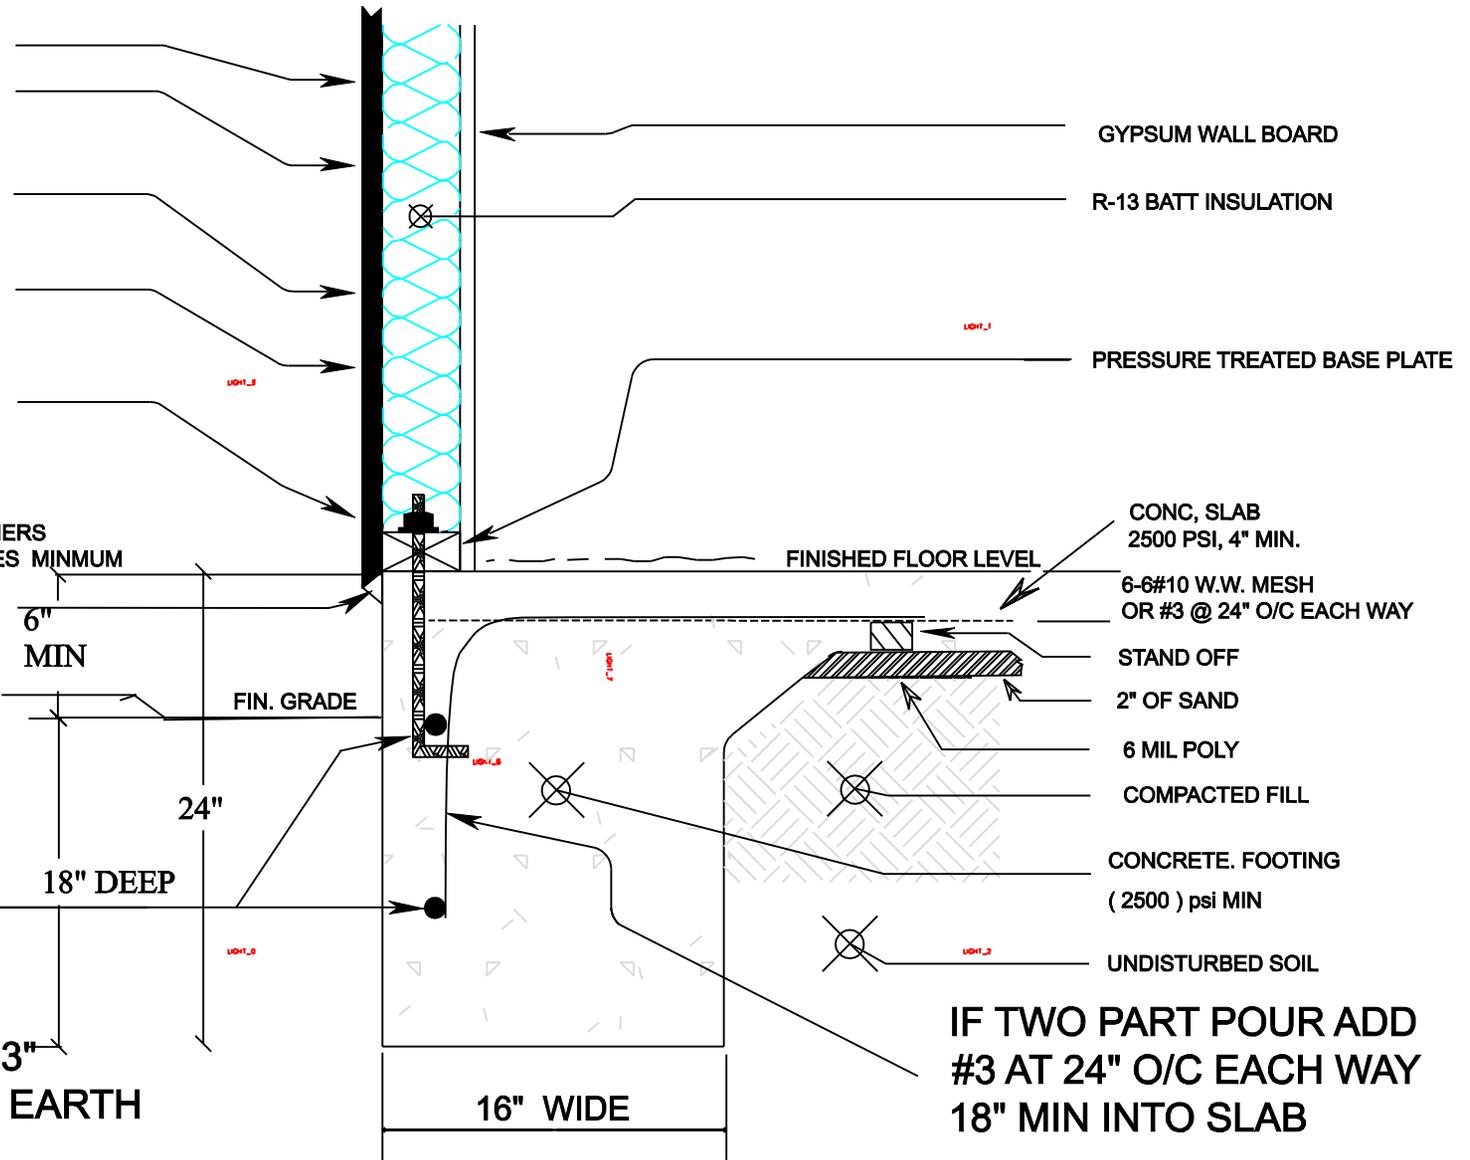

**IF TWO PART POUR ADD
#3 AT 24" O/C EACH WAY
18" MIN INTO SLAB**

**TYPICAL FOOTING & SLAB SINGLE STORY BUILDING
WITH SIDING OR STUCCO**